



## Jacobs/DIN 238 Chuck Adaptors

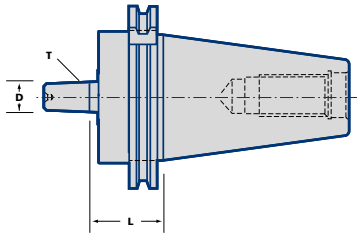

**Balanced by Design**

Taper	Ordering No.	Stock	T	D	L
<b>40</b>	DV40- DTB16-038	•	B16	16	38
	DV40- JT6-039	•	J6	17,2	39
	DV40- JT33-038	•	J33	15,9	38
<b>50</b>	DV50- DTB16-038	•	B16	16	38
	DV50- JT6-039	•	J6	17,2	39
	DV50- JT33-039	•	J33	15,9	39

## Automotive Shank Adaptors

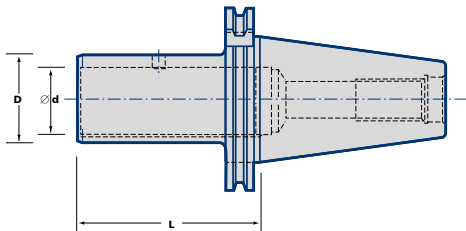

Taper	Ordering No.	Stock	D	L
<b>40</b>	DV40- AS28-070	•	40	70
	DV40- AS28-085	•	40	85
	DV40- AS36-120	•	50	120
<b>50</b>	DV50- AS28-100	•	40	100
	DV50- AS36-100	•	50	100
	DV50- AS48-100	•	67	100

## Spare Parts

Sidelock Screws



See page  
139